


VolvoTech.EU MANUAL

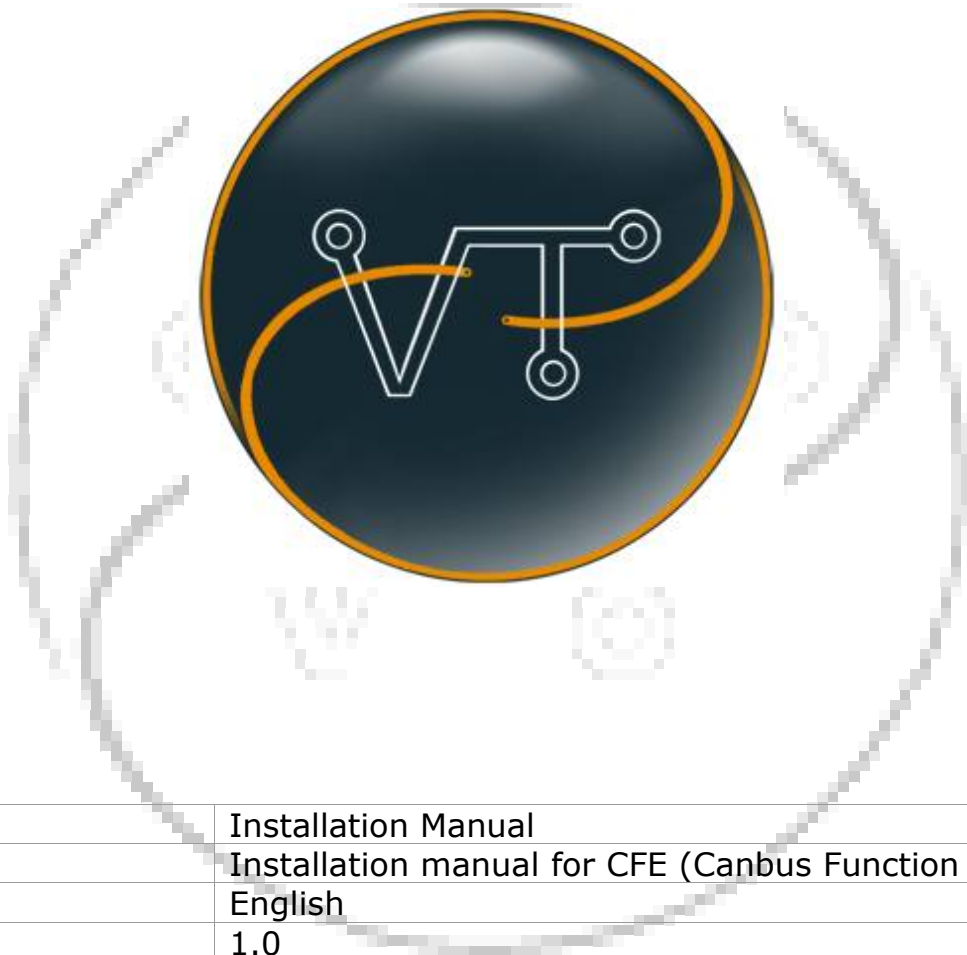

Kind	Installation Manual
Titel	Installation manual for CFE (Canbus Function Extender)
Language	English
Version	1.0
Date	December 19th 2012
Applicable to	CFE with CFE-RTI connector
Contents	Manual describes installation of the CFE in your Volvo in combination with the RTI connection set.



CFE Installation MANUAL


Applicable to:

CFE with CFE-RTI cable.

To install the CFE in your Volvo, using the CFE-RTI connection set, a few simple steps are to be taken.

Pre requirements;

- Car ignition is in position OFF.
- DVD RTI Computer installed in your Volvo.
NOTE: NOT FOR XC90!!
- CFE has been configured with the CFE Updater software

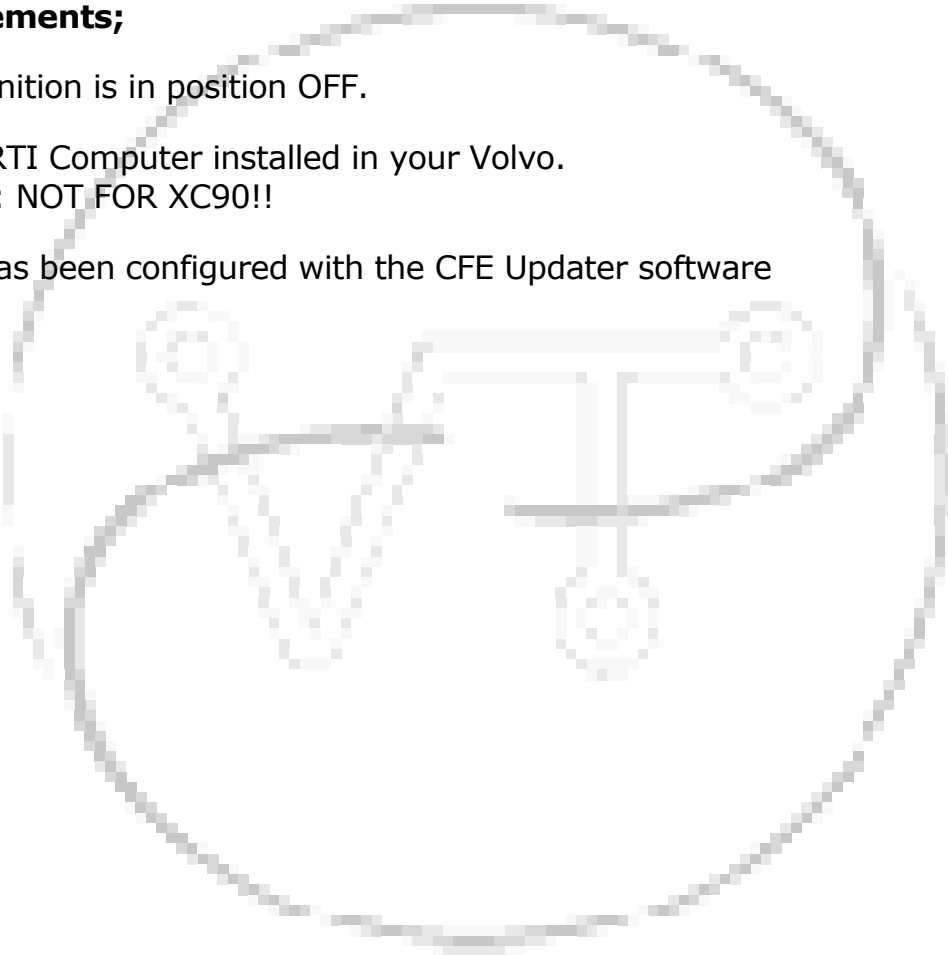



Does my Volvo have a DVD Computer installed which is compatible with the CFE-RTI Connection cable?

Check if your DVD Navigation unit looks like this:
(Valid check for S60,S80,V70,XC70)

(Located in the trunk of your car, left side)



Then you have a YES, you can use the VolvoTech CFE-RTI Connection set!

Installation of the CFE:

Open and remove the displayed cover in the left-rear of the trunk.



Remove the cover of the DVD unit.





Remove the trunk-cover in case you have that installed.



Unlock and fold forwards the back of the left-rear seat.;



Remove the bolt from the left-rear panel as displayed..







Remove, carefully, but with some force, the panel as shown in the picture. (Pull the cover away from the window to “unlock:” it from it’s holders. A little but firm pull just at the place where your previously removed the cover should do).



Now carefully remove the foam which is settled around the DVD-RTI Unit, and fold it out. You will need to remove a black clasp, by turning it 1 bit clockwise.



Now, remove the Torx bolts (4 pieces) from the DVD-RTi Unit, which makes it possible to remove the unit from its holder. Please carefully pull the unit forward. Do not create to much tension on the cables!
Then remove the Canbus/Power cable (looks the same as in the CFE-RTI Connection set) from the DVD-Unit.

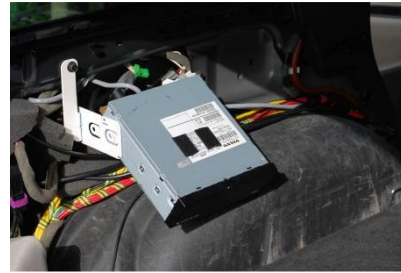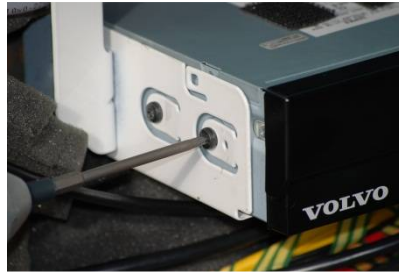

Now connect the GREEN (Supplied) male connector to the green counter part in the RTI computer.

Connect the GREEN (Supplied) female connector to the original green male connector you removed from the RTI Computer.

Connect the 9PIN D connector from the RTI-Connection set to the CFE.

DONE. ALL DONE. THAT'S IT!

Notes:

- Once the CFE makes a connection to the CanBus system of the car, the warning lights of the car will blink 3 times.
- The CFE will only start "working" the first time, after you close and open a door.
- The CFE's leds will start lighting (Amber colored) the moment communication with the car is active.

Enjoy the CFE!